Speed Dial Guide

Aastra 6755i, 6757i and 6757iCT



Schmooze Com Inc.



The Speed Dial application lets you setup 30 Speed Dial Contacts for easy dialing.



Pressing the Speed Dial button should give you a screen like below.



From here you can

- Select- Pressing this will select the speed dial that you have highlighted on your phone and let you pick which number you would like to dial.
- Move Up- Move Up will Move the highlighted Speed Dial up one space in the list.
- · Clear- Will Clear all the highlighted entry
- Edit- This will let you edit the phone number and name for the highlighted entry
- Move Down- Move Down will Move the highlighted Speed Dial down one space in the list.
- Exit- Exit the Speed Dial app and return to the phones main screen.

Adding or Editing a New Speed Dial Entry

From the main Speed Dial screen press the up/down key to an available/unused slot and press the edit button.



Now use the keypad on your phone to enter a name. Use the right arrow key to enter spaces in the name



Now that we have a name entered we will press the down key to add a work number.



You can then press the down key again to enter a Mobile number, a Home Number or a Misc Number. Each entry can have up to 4 numbers associated with it.



When done, press the submit button to save your changes and you will be directed back to the main Speed Dial Screen



Dialing A Special Dial Entry

Once you have your Speed Dials setup you can dial any speed dial entry by pressing the select button. To highlight a different entry to select press the up/down arrow keys on your phone. Once you have pressed the select button you should see a screen like this.



You can then use the up/down button to highlight the number you want to dial and press the Dial key.



To exit the application and return back to the phones main screen press the Exit button. To go back one screen and see the list of entries press the Back button

Changing the Speed Dial List Order

You can change the order in which the names appear on your Speed Dial List by using the Move Down and Move Up Buttons.



Highlight the Entry that you want to move and press the Move Up or Move Down buttons one at a time to Move up or down one space in the list.

