Cortelco C60P Admin Guide





Chapters


- How to Find the IP Address
- How to Find the MAC Address
- How to Set the Configuration Server

How to Restore Factory Default


How to Find the IP Address

Quick Steps

1. Press the Menu soft key.

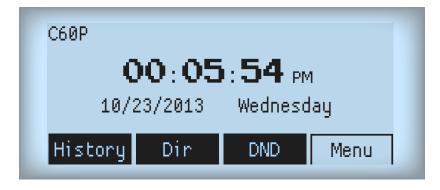

2. The first option will be Status, press Enter.

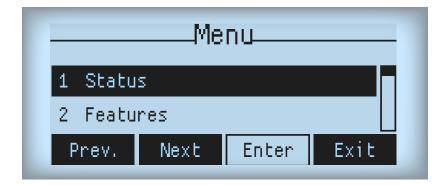

3. The IP Address will display as number 2.

Status				
1 Mode:	DHCP			
2 WAN IP: 10.10.0.1				
Prev.	Next		Back	

How to Find the MAC Address

Quick Steps

- 1. Enter the IP Address into a local web browser address field.
- 2. When prompted, enter "admin" as the user name and "admin" as the password.

User:	admin
Password:	••••
Language:	English 🔻
	Logon
	Logon

3. On the main System Status page you can se the MAC Address.

	STATUS	WIZARD CALL LOG	LANGUAGE	
* BASIC	Network			
• NETWORK	WAN		LAN	
NETWORK .	Connection Mode	DHCP	IP Address	192.123.10.1
> VOIP	MAC Address	00:a8:59:c8:27:e8	DHCP Service	Enabled
	IP Address	10.10.0.1	Bridge Mode	Enabled
> PHONE	IP Gateway	10.10.0.2		
FUNCTION KEY	Accounts			
	SIP Line 1	5703@10.10.0.1:5070	Trying	
MAINTENANCE	SIP Line 2	@:0	Unapplie	
	IAX2	@:4565	Unapplie	d
• SECURITY				
+ LOGOUT				


How to Set the Configuration Server

Quick Steps

- 1. Enter the IP Address into a local web browser address field.
- 2. When prompted, enter "admin" as the user name and "admin" as the password.

User:	admin
Password:	••••
Language:	English 🔻
	Logon

3. Click on "Maintenance" from the options on the left.

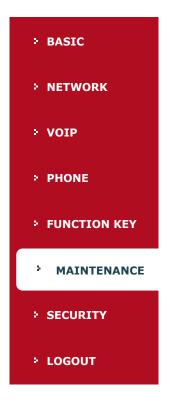

4. Select the "Update" tab at the top of the page.




5. In the "Server Address" field under TFTP/FTP Update, paste the IP Address.

	AUTO PROVISION SYSLOG CONFIG UPDATE ACCESS REBOOT
> BASIC	Web Update
• NETWORK	Select File: Browse (*.z,*.txt,*.xml,*.au,*.vcf,*.csv,*.wav) Update
> VOIP	TFTP/FTP Update Server Address
• PHONE	User Password
• FUNCTION KEY	File Name Apply
* MAINTENANCE	Protocol FTP _
SECURITY	Update Logo File Select File: Browse Update
+ LOGOUT	Delete Logo File
	Select File: Delete
	Logo File

How to Restore Factory Default

Quick Steps

1. Press the Menu soft key.

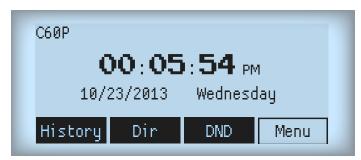

2. Scroll to option 3, Settings, and press Enter.




3. Then select option 2, Advanced Options, and press Enter.



4. Now enter the password, which is 123 by default and press Enter.

Ente	^ Passwor	·d:	
xxx			
Delete	123	Enter	Back

5. Scroll to option 5, Factory Reset, press Enter and select Yes.

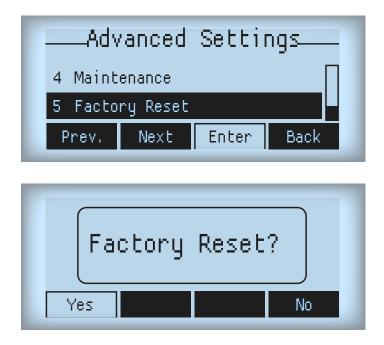



(920) 886-8130

http://schmoozecom.com