

# CyberData Office Ringer V3

## Admin Guide



**Schmooze**<sup>®</sup>  
Schmooze Com Inc.



## How To Find The IP Address

### Quick Steps

1. To find this IP address download CyberData's VoIP Discovery Utility program which allows you to easily find and configure the default web address of the CyberData VoIP products. CyberData's VoIP Discovery Utility program is available at the following website address. [http://www.cyberdata.net/support/voip/discovery\\_utility.html](http://www.cyberdata.net/support/voip/discovery_utility.html)

## How To Find The MAC Address

### Quick Steps

1. Login to the Web GUI of the device by putting the IP address of the device into your browser. Login to the device when prompted. The factory default username is admin and the password is also admin

The server http://10.10.0.223:80 requires a username and password. The site says: CyberData VoIP Strobe.

User Name:

Password:

2. Once logged in scroll to the bottom of the page and you should see the MAC and IP address

Current Settings	
Serial Number:	087000063
Mac Address:	00:20:f7:00:ec:d9
Firmware Version:	v1.0.1
IP Addressing:	dhcp
IP Address:	10.10.0.223
Subnet Mask:	255.255.255.0
Default Gateway:	10.10.0.254
DNS Server 1:	199.102.239.4
DNS Server 2:	
SIP Mode is:	enabled (Registered with SIP Server)
Event Reporting is:	disabled
Nightringer is:	enabled (Registered with SIP Server)



## How To Set The Configuration Server

### Quick Steps

1. Login to the Web GUI of the device by putting the IP Address of the device into your browser. Login to the device when prompted. The factory default username is admin and the password is also admin.

The server http://10.10.0.223:80 requires a username and password. The site says: CyberData VoIP Strobe.

User Name:

Password:

2. Once logged in click on the “Autoprovisioning” option on the left side.



3. Fill in the following information.
  - **Enable Autoprovisioning** - Check the box
  - **Get Autoprovisioning from DHCP** - Check the box
  - **Autoprovisioning Server (IP Address)** - Define the IP address of your PBX in our example this is 10.10.0.1

**Autoprovisioning (Autoprovisioning Enabled)**

Autoprovisioning

Enable Autoprovisioning:

 
Get Autoprovisioning from DHCP:

Autoprovisioning Server (IP Address):

Autoprovisioning autoupdate (in minutes):




4. Don't forget to press the save and then reboot button at the bottom of the page when done.



## How To Factory Default

### Quick Steps

1. Press and hold the RTFM switch until the button LED starts blinking rapidly (about 10 seconds), then release the RTFM switch.

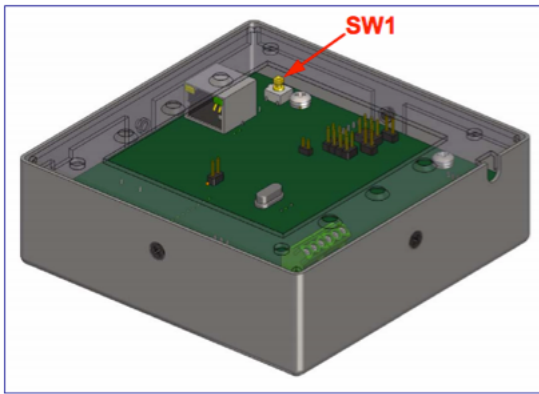

2. The device announces that it is restoring the factory default settings.



**Schmooze**<sup>®</sup>  
*Schmooze Com Inc.*

**(920) 886-8130**

<http://schmoozecom.com>