

CyberData Paging Adapter V2

Admin Guide



Schmooze[®]
Schmooze Com Inc.



Chapters

- ▶ How to Find the IP Address
- ▶ How to Find the MAC Address
- ▶ How to Set the Configuration Server
- ▶ How to Restore Factory Default



How to Find the IP Address

Quick Steps

1. To find this IP address, download CyberData's VoIP Discovery Utility program which allows you to easily find and configure the default web address of CyberData VoIP products. CyberData's VoIP Discovery Utility program is available at the following website address. http://www.cyberdata.net/support/voip/discovery_utility.html

How to Find the MAC Address

Quick Steps

1. Enter the IP Address into a local web browser address field to access the Web GUI for the device. Login to the device when prompted. The default username and password are both "admin."

The server http://10.10.0.223:80 requires a username and password. The site says: CyberData VoIP Strobe.

User Name:

Password:

2. Once logged in, you should see the MAC Address under "Current Settings."

Current Settings

Serial Number:	087000063
Mac Address:	00:20:f7:00:ec:d9
Firmware Version:	v1.0.1
IP Addressing:	dhcp
IP Address:	10.10.0.223
Subnet Mask:	255.255.255.0
Default Gateway:	10.10.0.254
DNS Server 1:	199.102.239.4
DNS Server 2:	
SIP Mode is:	enabled (Registered with SIP Server)
Event Reporting is:	disabled
Nightringer is:	enabled (Registered with SIP Server)



How to Set the Configuration Server

Quick Steps

1. Enter the IP Address into a local web browser address field to access the Web GUI for the device. Login to the device when prompted. The default username and password are both “admin.”

The server http://10.10.0.223:80 requires a username and password. The site says: CyberData VoIP Strobe.

User Name:

Password:

2. Once logged in, click on the “Autoprovisioning” option on the left side of the screen.



3. Fill in the following information.
 - **Enable Autoprovisioning** - Check the box
 - **Get Autoprovisioning from DHCP** - Check the box
 - **Autoprovisioning Server (IP Address)** - Define the IP Address of your PBX. In our example this is 10.10.0.1

Autoprovisioning (Autoprovisioning Enabled)

Autoprovisioning

Enable Autoprovisioning:	<input checked="" type="checkbox"/>
Get Autoprovisioning from DHCP:	<input checked="" type="checkbox"/>
Autoprovisioning Server (IP Address):	<input type="text" value="10.10.0.1"/>
Autoprovisioning autoupdate (in minutes):	<input type="text" value="1440"/>



4. Press the Save button at the bottom of the page when you're done. Then press the Reboot button for your changes to take effect.


* You need to reboot for changes to take effect

Save Reboot

How to Restore Factory Default

Quick Steps

1. Press and hold the the RTFM switch on the back of the device until the status and paging lights come on.

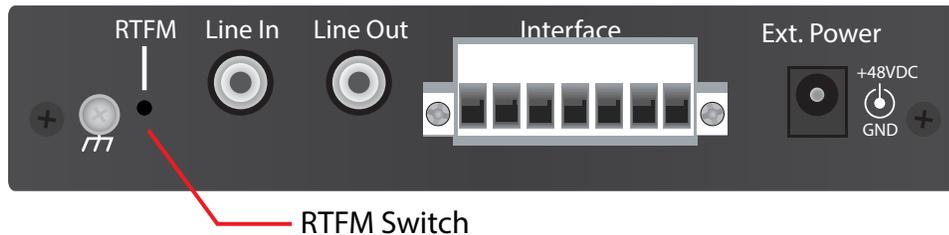

2. Continue to press the switch until after the indicator lights go off, and then release it. The Paging Adapter settings are now restored to the factory defaults.



Schmooze[®]
Schmooze Com Inc.

(920) 886-8130

<http://schmoozecom.com>