



How To Find The IP Address

Quick Steps

1. On the PA1 press the reset button momentaryly and the IP address will be announced over the speaker or headset. Make sure you have a speaker or headset plugged into the device.



How To Find The MAC Address

Quick Steps

- 1. Find the IP address of the phone and open a web browser to the IP address.
- 2. Login with the phone admin password.

The server 10.4.0.168:80 requires a username and password. The server says: IP Phone.		
User Name:	admin	
Password:	••••	
	Cancel Log In	

3. On the left side under the "Status" section, click on "System Information".



4. The MAC address will now be displayed at the top.

System Information:	
Phone Type:	snomPA1-SIP
MAC-Address:	00041333232D
IP-Address:	10.4.0.145
Firmware-Version:	snomPA1-SIP 8.7.3.15
Firmware-URL:	
	Mac:00041333232D;Version:Standard;Hardware:snomPA1
Production Information:	(R2A-2110-V39-S02-P00);Date:15/03/12;Copyright(C) snom
	technology AG
Uptime:	0 days, 0 hours, 2 minutes
LCS:	0 days, 0 hours, 2 minutes (0)
Memfree:	1920 K
CPU:	0.06 0.03 0.00 1/10 10
Bootloader-Version:	1.1.3-s
Expansion Module:	(0)

How To Set The Configuration Server

Quick Steps

- 1. Find the IP address of the phone and open a web browser to the IP address.
- 2. Login with the phone admin password. Factory default password is 0000.

The server 10.4.0.168:80 requires a username and password. The server says: IP Phone.		
User Name:	admin	
Password:	••••	
	Cancel Log In	

3. Click on the "Advanced" option on the left side.



4. Click on "Update" on the top right.

Network Behavior Audio SIP/RTP	QoS/Security Update
Update:	
Update Policy:	Never update, load settings only 💠 🖤
Setting URL:	http://provisioning.snom.com/sr
Settings refresh timer:	0 (?)
PnP Config:	●on ○off ⑦
Apply	Reset Reboot

5. Define the Setting URL to your PBX. Generally this would be tftp://IPADDRESS, (**Example:** tftp://10.10.0.1) press the "Apply" button.

Network Behavior Audio SIP/RTP	QoS/Security Update
Update: Update Policy:	Update automatically + ?
Setting URL:	tftp://10.10.0.1
Settings refresh timer:	(?
PnP Config:	●on ○off
Apply	Reset Reboot

6. You will then be prompted to press the "reboot" button.

How To Factory Default

Quick Steps

1. Press the hold the reset button on the PA1 base unit for 15 seconds.



2. All front panel lights come on when a factory restart is initiated.



(920) 886-8130

http://schmoozecom.com