

Uniden EXP1240 SIP DECT

Admin Guide



Schmooze[®]
Schmooze Com Inc.



Chapters

- ▶ How to Find the IP & Mac Addresses
- ▶ How to Set the Configuration Server
- ▶ Reset to Factory Defaults



How to Find the IP & Mac Addresses

Quick Steps


1. Press the Menu button.



2. Toggle down to the option “Settings” and press “Select.”



3. Scroll down to “Status” and press “Select.”

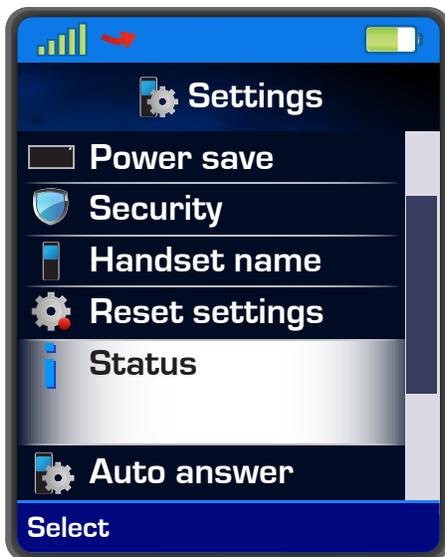



4. The IP and Mac Addresses for this device will display here.



How to Set the Configuration Server

Quick Steps

1. Enter the IP Address into a local web browser address field.
2. When prompted, enter “admin” as the user name and “admin” as the password.

**Authentication Required**
Enter username and password for http://10.10.0.1.
User Name:
Password:



3. Then select “Management” from the options on the left.

ASME VoIP

- Home/Status
- Extensions
- Servers
- Network
- Management**
- Firmware Update
- Time

Welcome

System Information:

Phone Type:	IPDECT
System Type:	Generic SIP (RFC 3261)
RF Band:	US
Current local time:	01/Jan/1970 00:07:43
Operation time:	00:07:38 (H:M:S)
RFPI-Address:	118CEC9300; RPN:00
MAC-Address:	00097b08e540
IP-Address:	10.10.0.1
Firmware-Version:	IPDECT/03.06/B0004/02

Multi cell Disabled

4. Lastly, populate the “Configuration Server Address” field to your PBX. Generally this would be an IP Address, such as 10.10.0.1 in our example. Then press the “Save” button at the bottom when you are finished.

ASME VoIP

- Home/Status
- Extensions
- Servers
- Network
- Management**
- Firmware Update
- Time
- Country
- Security
- Central Directory
- Multi cell
- Repeaters
- Statistics
- Configuration

Management Settings

Base Station Name:	<input type="text" value="ASME VoIP"/>
Management Transfer Protocol:	<input type="text" value="TFTP"/>
HTTP Management upload script:	<input type="text" value="/CfgUpload"/>
HTTP Management password:	<input type="text"/>
Configuration Server Address:	<input type="text" value="tftp://10.10.0.1"/>
Base Specific File:	<input type="text"/>
Multi Cell Specific File:	<input type="text"/>
Configuration File Download:	<input type="text" value="Base and Multi Cell Specific File"/>
SIP Log Server Address:	<input type="text"/>
Upload of SIP Log:	<input type="text" value="Disabled"/>
Syslog Server IP-Address:	<input type="text"/>
Syslog Server Port:	<input type="text" value="514"/>
Syslog Level:	<input type="text" value="Normal Operation"/>
Enable Automatic Prefix:	<input type="text" value="Disabled"/>
Set Maximum Digits of Internal Numbers:	<input type="text" value="0"/>
Set Prefix for Outgoing Calls:	<input type="text"/>



Reset to Factory Defaults

Quick Steps



1. Press the Menu button.



2. Toggle down to the option “Settings” and press “Select.”



3. Scroll down to “Reset Settings” and press “Select.” A warning will then show on the screen asking, “Are you sure you want to reset settings?” To proceed with this process, press “Yes.”

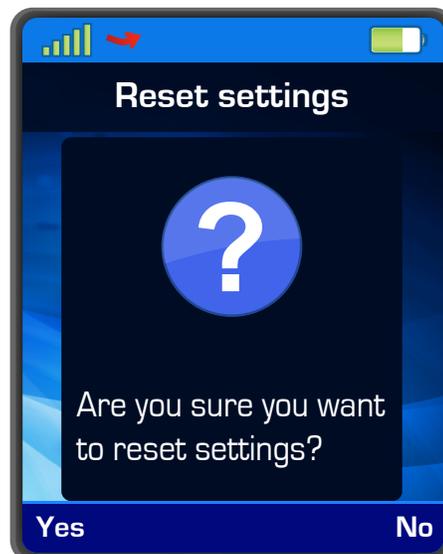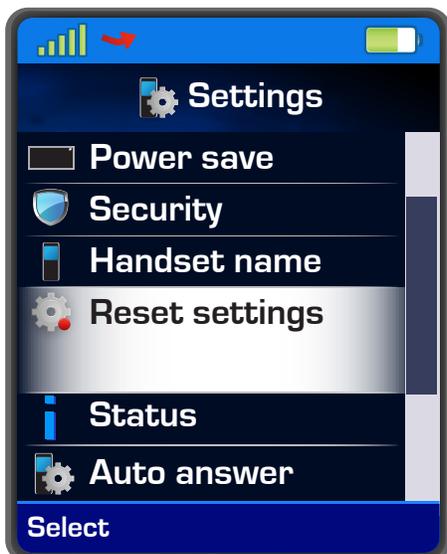



Schmooze[®]
Schmooze Com Inc.

(920) 886-8130

<http://schmoozecom.com>