

# Yealink T46G

## Admin Guide



**Schmooze®**  
Schmooze Com Inc.



## Chapters


- ▶ How to Find the IP Address
- ▶ How to Find the MAC Address
- ▶ How to Set the Configuration Server
- ▶ How to Restore Factory Default




## How to Find the IP Address

### Quick Steps


1. Press the “Menu” button to enter the main menu.

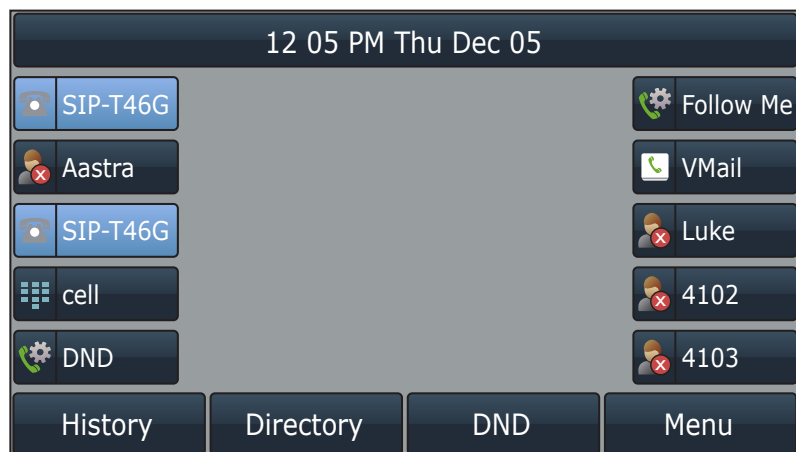

2. Option 1 is “Status” and should already be highlighted. Then press “Enter.”

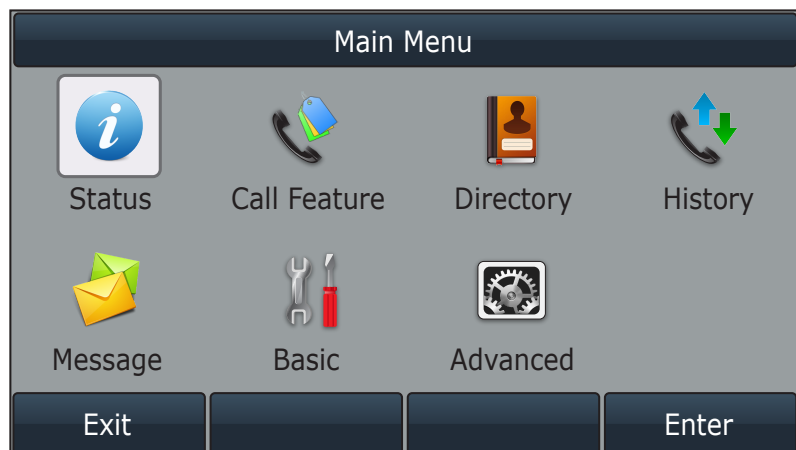

3. The IP Address will display here.

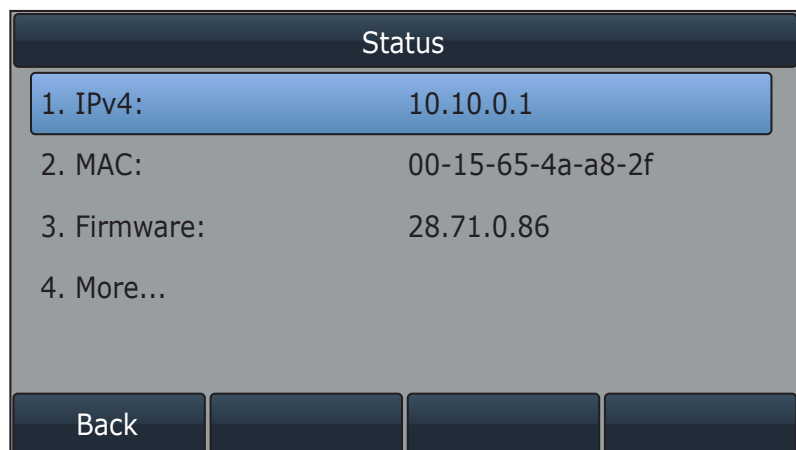





# How to Find the MAC Address

## Quick Steps


1. Press the “Menu” button to enter the main menu.

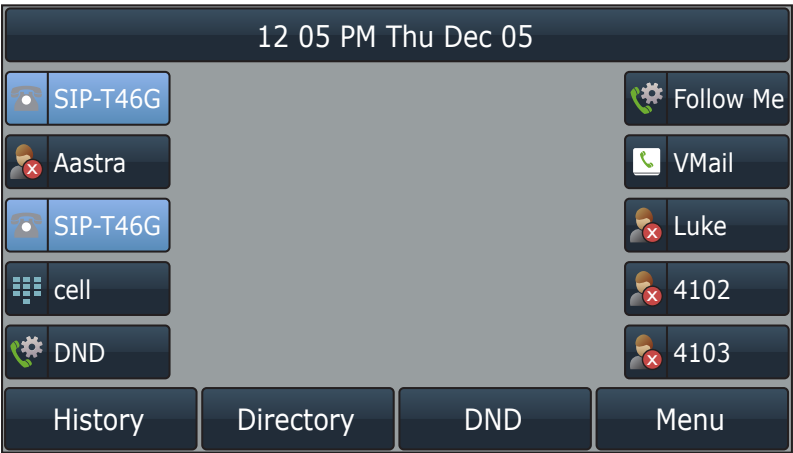

2. Option 1 is “Status” and should already be highlighted. Then press “Enter.”

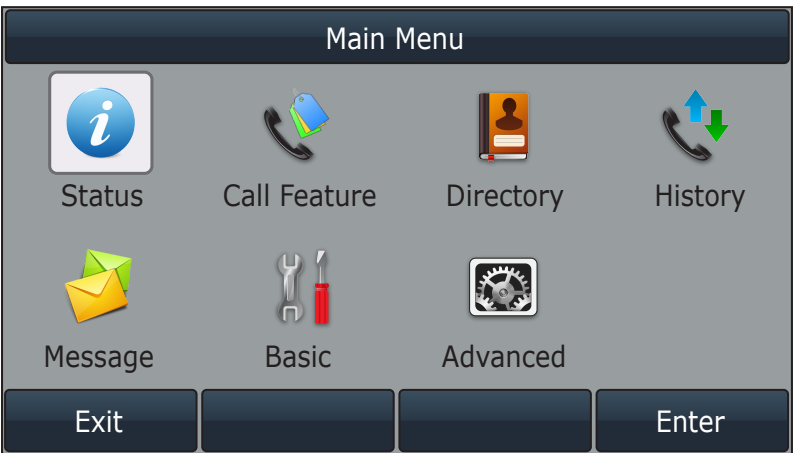

3. The MAC Address will display here.

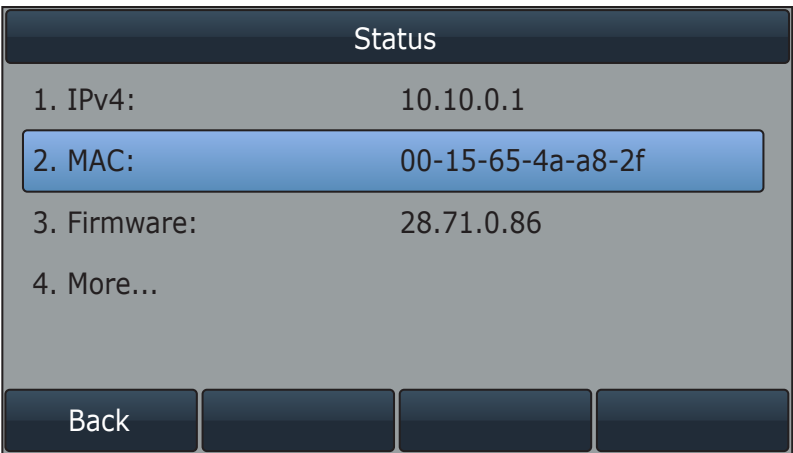



## How to Set the Configuration Server

### Quick Steps

1. Enter the IP Address into a local web browser address field.
2. When prompted, enter “admin” as the user name and “admin” as the password.

# Login

Enterprise IP phone SIP-T46G

---

Username

Password

3. From the home page of the GUI, click on the “Settings” tab at the top.

## Yealink

Status

Account

Network

DSSKey

Features

Settings

Direct

Status

**Version** ?

Firmware Version28.71.0.86

Hardware Version29.0.0.0.0.0.0

**Network** ?

Internet PortIPv4

**IPv4** ?

WAN Port TypeDHCP

WAN IP Address10.10.0.1

Subnet Mask255.255.255.0

Gateway10.4.0.254

Primary DNS199.103.245.4

Secondary DNS8.8.8.8

**Network Common** ?

MAC Address0015654aa82f


NOTE

**Version:**  
It shows the version

**Network:**  
It shows the informa  
port.



4. Then click on “Auto Provision” from the options on the left.

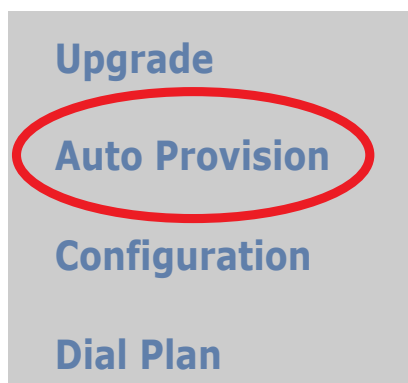

5. Lastly, populate the “Server URL” field to your PBX. Generally this would be an IP Address, such as 10.10.0.1 in our example. Then press the “Confirm” button at the bottom when you are finished.

**Yealink**

StatusAccountNetworkDSSKeyFeaturesSettingsDirect

Preference

Time & Date

Upgrade

**Auto Provision**

Configuration

Dial Plan

Voice

Ring

Tones

Softkey Layout

**Auto Provision**

PNP Active

☒ On ☐ Off ?

DHCP Active

☒ On ☐ Off ?

Custom Option(128~254) ?

DHCP Option Value

yealink

 ?

Server URL

10.10.0.1

 ?

User Name ?

Password ?

Common AES Key ?

MAC-Oriented AES Key ?

Zero Active

Disabled

 ?

Wait Time (0~100s)

5

 ?

Power On

☒ On ☐ Off ?

Repeatedly

☐ On ☒ Off

Interval (Minutes)

1440

Weekly

☐ On ☒ Off

Time

00 : 00 -- 00 : 00

Day of Week

☒ Sunday

☒ Monday

☒ Tuesday

☒ Wednesday

☒ Thursday

☒ Friday

☒ Saturday

Autoprovision Now ?

Confirm

Cancel

**NOTE**


Phone AutoProvision




# How to Restore Factory Default

## Quick Steps


1. Press the “Menu” button to enter the main menu.

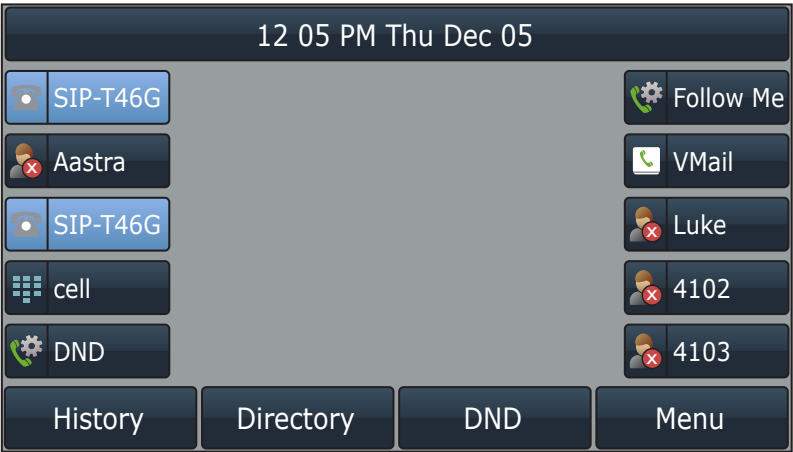

2. Highlight the last option, “Advanced,” and press “Enter.”

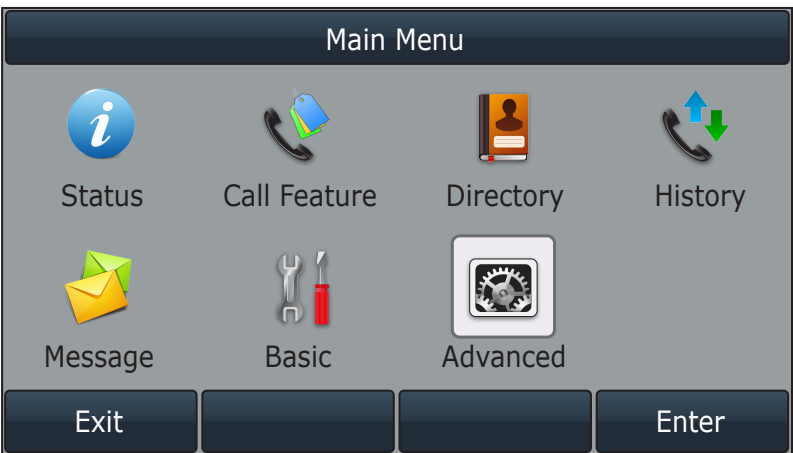

3. Then enter your password. By default this is “admin.”

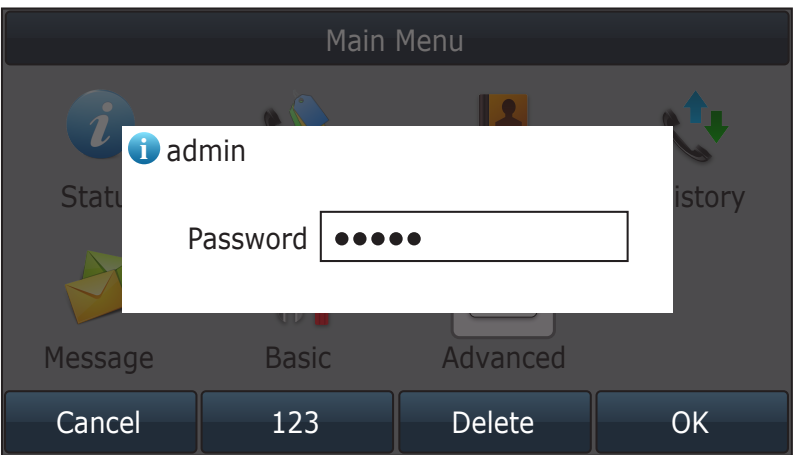



4. Next scroll to option 8, “Reset&Reboot.”

Advanced

6. Auto Provision

7. FWD International

8. Reset&Reboot

Back Enter

5. Option 1 is “Reset to Factory” and should already be highlighted. Then press “Enter.”

Reset&Reboot

1. Reset to Factory

2. Reboot

Back Enter

6. Use the “Switch” button to set the Reset Option to “Full Reset.” Then press the “Save” button. A warning will then show on the screen asking you to “Reset to Factory?” To proceed with this process, press “OK.”

Reset&Reboot

1. Reset Option: Full Reset ◀ ▶

Back Switch Enter

Reset&Reboot

1. Reset Option: Full Reset ◀ ▶

**i** Warning

Reset to factory?

Cancel OK





**Schmooze<sup>®</sup>**  
*Schmooze Com Inc.*

**(920) 886-8130**

<http://schmoozecom.com>