Yealink T48G Admin Guide





Chapters

- How to Find the IP Address
- How to Find the MAC Address
- How to Set the Configuration Server

How to Restore Factory Default

How to Find the IP Address

Quick Steps

1. Press "Menu" to enter the main menu.



2. Press "Status," which should be the first option.

T SIP-T48G	Main Menu 11 30 AM M		11 30 AM Mon Mar 17
<i>i</i> Status	Call Features	Directory	History
Messages	Basic	Advanced	
5			#

3. The IP Address will display here.



How to Find the MAC Address

Quick Steps

1. Press "Menu" to enter the main menu.



2. Press "Status," which should be the first option.

🕋 SIP-T48G	Main N	Main Menu	
<i>i</i> Status	Call Features	Directory	History
Messages	Basic	Advanced	
5			^

3. The MAC Address will display here.

🐨 SIP-T48G	Genera	l	11 30 AM Mon Mar 17
General	1.IPv4:	10.10.0 1	
Network	2.MAC:	00-14-64-4c-57-	7c
Phone	3.Firmware:	35.72.0.6	
Accounts			

How to Set the Configuration Server

Quick Steps

- 1. Enter the IP Address into a local web browser address field.
- 2. When prompted, enter "admin" as the user name and "admin" as the password.

Login	Enterpri	ise IP phone SIP-T46G	
Username Password	admin •••••		
C	onfirm	Cancel	

3. From the home page of the GUI, click on the "Settings" tab at the top.

Vealink							
Teannik	Status	Account	Network	DSSKey	Features	Settings	Dire
Status	Version	0				NOTE	
	Firmw	are Version	28.71.0.	86		Version	
	Hardw	are Version	29.0.0.0	.0.0.0		It shows th	e version
	Network	?				Network:	
	Intern	et Port	IPv4			It shows th port.	ie informa
	IPv4 🧯						
	WAN F	Port Type	DHCP				
	WAN I	P Address	10.10.0.	1			
	Subne	t Mask	255.255.	.255.0			
	Gatew	ay	10.4.0.2	54			
	Primar	ry DNS	199.103.	.245.4			
	Secon	dary DNS	8.8.8.8				
	Network	Common 🕜					
	MAC A	ddress	0015654	aa82f			

4. Then click on "Auto Provision" from the options on the left.



5. Lastly, populate the "Server URL" field to your PBX. Generally this would be an IP Address, such as 10.10.0.1 in our example. Then press the "Confirm" button at the bottom when you are finished.

Yealink	Status Account	Network DSSKey Features	Settings Direc
PreferenceTime & DateUpgradeAuto ProvisionConfigurationDial PlanVoiceRingTonesSoftkey Layout	Auto Provision PNP Active DHCP Active Custom Option(128~254) DHCP Option Value Server URL User Name Password Common AES Key MAC-Oriented AES Key Zero Active Wait Time (0~100s) Power On Repeatedly Interval (Minutes) Weekly Time	 On Off On Off On Off Palink <	NOTE Phone AutoProvision
	Commun	Cancer	

How to Restore Factory Default

Quick Steps

1. Press "Menu" to enter the main menu.



2. Press "Advanced," which should be the last option.

SIP-T48G	Main M	Main Menu	
i Status	Call Features	Directory	History
Messages	Basic	Advanced	
5			^

3. Then enter your password. By default this is "admin."



4. Next use the down arrow to reveal more options on the left.

SIP-T48G		Accoun	t	11 30 AM Mon Mar 17
Account		1.(SIP-T48G)	Default Account	
Network		2.(Empty)		
Set Password		3.(Empty)		
Set AES Key	1/2	4.(Empty)		
Auto Provision		5 (Empty)		
FWD International		6 (Empty)		
Reboot				
5				^

5. Select the option "Reset to Factory," choose your Reset Option at the top and then press the "Reset" button in red.

SIP-T48G		Reset to Factory		11 30 AM Mon Mar	
Reset to Factory		1.Reset Option	Full Reset	•	
	2/2		Reset		
5					A

6. A warning will then show on the screen asking you to "Reset to Factory?" To proceed with this process, press "OK."

🐨 SIP-T48G	Reset to Factory 1		11 30 AM	M Mon Mar 17
Account				
Network				
Set Password	Reset to	Factory?		
Set AES Key	Neset to			
Auto Provision	Cancel	ОК		
FWD International				
Reboot				
5				A



(920) 886-8130

http://schmoozecom.com